

การตั้งค่า WA-ZD113 สำหรับ NT wireless net

Login -> superadmin : admin

Settings

❖ Network

➤ APN Management

- Enable -> Enable
- Profile Name -> pocket
- APN Name -> pocket

❖ Wi-Fi

➤ WLAN Settings

- Band -> 2.4GHz
 - WLAN -> Enable
 - SSID -> NT2300_2.4
 - Password -> net2300LTE
- Band -> 5GHz
 - WLAN -> Enable
 - SSID -> NT2300_5
 - Password -> net2300LTE

❖ System

➤ TR069

- Enable TR069 -> Enable
- ACS URL Source -> URL
- ACS URL -> <http://monitor.totwirelessnet>
- ACS Username -> monit
- ACS Password -> 9@ng!4Ak\$9
- Enable Periodic Inform -> Enable
- Periodic Inform Interval -> 300