

การตั้งค่า ZLT P21 สำหรับ NT wireless net

Device Settings

❖ Advanced Settings

➤ TR069

- Enabled -> enable
- ACS URL -> <http://monitor.totwirelessnet>
- Periodic Inform -> enable
- Periodic Inform Interval -> 300
- ACS Auth -> enable
- ACS Username -> monit
- ACS Password -> 9@ng!4Ak\$9
- CPE Auth -> enable
- CPE Username -> (ค่าว่าง)
- CPE Password -> (ค่าว่าง)

➤ Frequency

- Bands Locking -> Enabled
- Frequency Locking -> band40
- WCDMA -> band1

➤ Cell Locking

- Lock Cell Switch -> Disabled

❖ Internet Settings

➤ Network Selection

- Network Selection -> 4G/3G Only

➤ APN

- APN -> pocket

❖ Wireless Settings

➤ Wifi Switch

- Wi-Fi Switch -> Enabled

➤ SSID

- Main SSID
- Network Name(SSID) -> NT2300
- SSID Broadcast -> Enabled
- Security Mode -> WPA2-PSK(AES)
- Pass Phrase -> net2300LTE